


INSTRUCTION MANUAL

Dynamo Steam Mop & Sweeper

SSS-2618

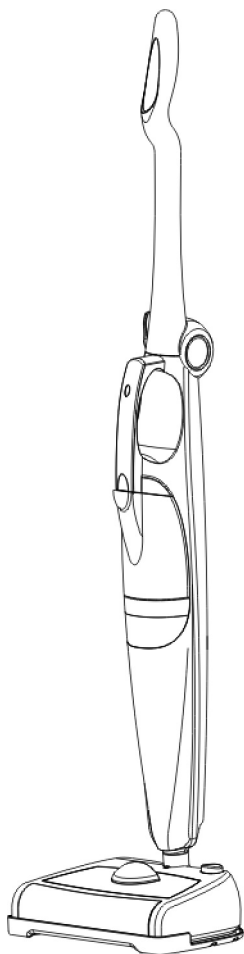

sienna™

CONTENTS

Safety Instructions.....	1-2
What is supplied.....	3
Device Overview.....	4
Before Initial Use.....	4
Unpacking.....	4
Assembly.....	5
Use.....	5-7
Preparing the device/filing water tank.....	5
Cleaning the floor.....	6-7
After use.....	8
Technical data.....	8
Troubleshooting.....	9
Warranty.....	10-11

Dear Customer,

We are delighted that you have chosen the "Dynamo Steam Mop & Sweeper". With this device you can quickly and efficiently clean almost all floors-even carpets! The really clever thing is: The rotating brush first removes loose dirt before the force of the steam mop can leave a hygienically clean finish. Ideal as an easy way of removing even more stubborn stains. This allows you to do all of your floor cleaning in one operation-which saves both time and energy!

We hope you have a lot of fun with your new "Dynamo Steam Mop & Sweeper".

SAFETY INSTRUCTIONS

SAVE THESE INSTRUCTIONS

This product is for household use only. Any commercial use will void the manufacturer's warranty. Basic precautions should be used when using an electrical appliance, including the following listed warnings.

READ ALL INSTRUCTIONS BEFORE USING YOUR DYNAMO STEAM MOP & SWEEPER.



Intended use

- This device is suitable for cleaning heat-resistant surfaces. It is also suitable for cleaning laminate flooring if you following the instructions below:
 1. The laminate should be properly laid and have no gaps or cracks into which moisture can penetrate.
 2. First test the steam mop at an inconspicuous spot and then check the laminate for waves or penetrated moisture.
 3. If the surface is unblemished, the device can be used to clean the entire laminate floor.
- The device is not suitable for unsealed wooden flooring, soft plastic, wooden furniture, leather and sensitive fabric covers.
- Only ever use the device on the floor and not, for example, on sofas, car seats etc.
- The device should not be used on glass as the hot steam can lead to glass breakage.
- Ask a specialist whether your flooring is suitable for being cleaned with the device. Always first test the cleaning with steam on a small spot.
- The device sweeps dust and loose, light dirt into the collecting container. Larger/heavier objects are not removed.
- On no account should the device be used to sweep up the following:
 1. glowing ash, cigarette ends, matches, etc.
 2. inflammable or explosive substances
 3. toxic substances, e.g. bleach
- The device is designed for private use and not for commercial use. The device should only be used as described in these instructions. Any other use is deemed to be improper.



Danger of injury

- Keep the article out of the reach of children! Improper use can lead to injuries and electric shock.
- Keep children and pets away from the packaging. There is a danger of suffocation, as well as other hazards!
- This device is not designed to be used by individuals (including children) with limited physical, sensory or mental abilities or those without sufficient experience and/or knowledge, unless they are supervised by someone responsible for their safety or have received instructions from them on how to use the device.
- Children must be supervised in order to ensure that they do not play with the device.
- Keep small children and pets away from the device while it is in operation.
- Keep hair, clothing, jewellery, fingers, or other body parts away from the openings or rotating parts of the device when it is in operation.
- **CAUTION DANGER OF BURNS!** Improper use can lead to injuries, burns, and electric shock.
- Never direct the steam at people, animals, plants or sensitive objects.
- Lay the cable in such a way that it does not pose a risk of tripping!
- Please take care when cleaning stairs that you do not stumble and fall.



Electricity-risk of electric shocks / risk of fire!

- Never immerse the device in water or other liquids to avoid the risk of electric shock. Do not use the device if it falls in water. In this case, please contact the Customer Service (1-888-SIENNA).
- Do not touch the device with wet hands.
- Do not operate it outdoors or in rooms with high humidity.
- Store the device only in dry indoor rooms. Do not use the device if it has been outdoors for a long period of time. In this case, contact our Customer Service department.
- In the event of damage/interference, disconnect the device from the mains immediately.
- PLEASE NOTE: Acute danger to life from electrocution! Never try to repair an electrical article yourself; contact your nearest customer service centre/specialist dealer to ensure your own safety. The same applies to the mains lead. In case of damage, contact our Customer Service department.
- Do not use the device if the cable, plug or any other part of the device is damaged.
- Never carry or pull the device with the mains lead; always treat the mains lead with care. Avoid pinching the cable in doors or pulling it over sharp edges or corners. Keep the cable away from hot surfaces.
- Connect the device only to an earthed plug socket whose mains voltage corresponds to the data on the rating plate of the device. The mains socket must still be accessible after the connection has been made.
- The device must be switched off when inserting or removing the mains plug.
- Remove the mains plug from the mains socket,
 1. when the device is not in use,
 2. before refilling it with water,
 3. before changing the floor cloth,
 4. when there is a thunderstorm,
 5. before you clean it.
- Always pull the plug, never the mains cable, to remove the plug from the mains socket.
- Touch the mains plug only with dry hands.
- This device must be earthed when connected. Use only the appropriate plug. Do not try to circumvent the earthing.
- Do not use any extension cables.
- Do not use the device if highly flammable gases are present in the air.



Equipment and device damage

- Use the device only when it is completely assembled and the mains cable is completely unwound. The water reservoir and the filter must be inserted.
- In the interests of your own safety, inspect the device for damage every time before use.

In the event of defects, the device must not be used until it has been repaired by qualified personnel.

If the mains lead is damaged, it must be replaced in an authorised workshop in order to avoid danger.


- Always use the floor cloth and check it for signs of wear each time you use it. Do not use it if it shows any signs of wear or if it is damaged! It could damage your flooring!
- Use only the accessories included in the scope of supply or recommended by the manufacturer. Use only original manufacturer's spare parts.
- In the case of surfaces treated with wax, the heat and steam may remove the wax!
- Never pour any cleaning agent or other additives into the water reservoir. This could destroy the device and safe working is no longer guaranteed.
- Only fill it with normal or distilled water. Using any other liquids can damage the device.
- Never operate the device with the steam function if the water reservoir is empty.
- Never direct the steam at one spot for too long.
- Do not insert anything into the openings/nozzles of the device and take care that these do not become clogged.
- Ensure that the device does not roll over the mains cable.
- Always work with sufficient lighting.
- Do not drop the device or allow it to be knocked violently.
- Do not expose the device to extreme temperatures, wide temperature variations, or direct sunlight.

What is supplied

- 1 central piece with a handle
- 1 cleaning foot
- 1 screw
- 1 water tank
- 1 carpet glider
- 2 floor cloths
- 1 replacement sealing ring for the filter
- These operating instructions

Device Overview

1. Steam release button
2. Cable mount
3. Top handle
4. Water tank
5. Water filter
6. Central piece
7. Carpet glider
8. Floor cloth
9. Lower hook for cable reel
10. Mains cable
11. Upper hook for cable reel
12. Unlocking button of the handle
13. On/Off switch for the rotating brush
14. Cleaning foot
15. Collecting container
16. Handle for removing the water tank
17. Carrying handle
18. Control lamp

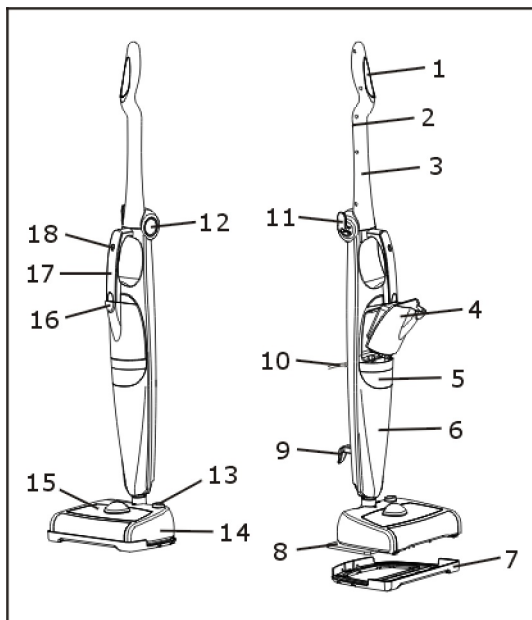

Before Initial Use

Before you can use the device, you must:

- unpack the items supplied,
- assemble the device.

A. Unpacking




PLEASE NOTE!

- Keep children and animals away from the packaging material. There is a danger of suffocation!

Unpack all parts and check the scope of supply for completeness (see "What is supplied" section); also check for transport damage. If you find any damage to the components, **do not** use them, but contact our Customer Service department (1-888-5SIENNA).

B. Assembly

1. Place the central piece (6) onto the cleaning foot (14).
2. Screw the two parts together on the back using the screw which is also supplied.
3. Insert the water tank (4) into the central piece and press it down until it engages audibly.
4. Press the unlocking button (12) of the top handle (3) and at the same time tilt it up until it engages audibly.
5. Turn the upper hook of the cable reel (11) so that it points upwards and wrap the Mains cable (10) around the two hooks of the cable reel.

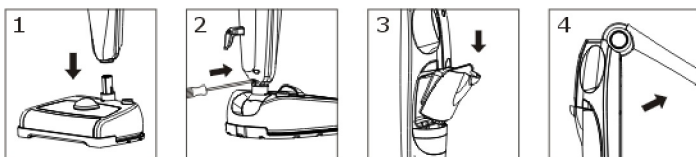

Use

This device sweeps up dust and loose dirt into the collecting container and then cleans the floor with hot steam immediately after this. However, you can also activate the sweep function and steam function individually.

We recommend that you first sweep a very dirty floor with the device and then clean it with steam in a second step.

The water tank can be filled with tap water. However, in areas which have hard water, we recommend that you use distilled water in order to prevent calcification.






A. Preparing the device/filling water tank



PLEASE NOTE!

- Never pour any cleaning agent or other additives into the water tank. These may damage the device.
- Before using the device, always check the floor cloth for signs of wear. Do not use it if it shows any signs of wear or if it is damaged! It could damage your flooring!

1. If not pre-fitted, attach one of the floor cloths supplied (8) to the bottom of the cleaning foot using the Velcro fasteners.
2. If the water tank (4) is inserted in the device, remove it as follows: Reach into the recess (16) next to the handle (17) of the device and pull the water tank away from the device.
3. Unscrew the closure of the water tank, fill the water tank preferably with distilled water at room temperature and then close it again. Firmly turn the closure shut.
4. Place the water tank into the central piece (6) and press it down until it engages audibly.
5. If the upper handle (3) is tilted downwards, press the unlocking button (12) of the handle and at the same time tilt it up until it engages audibly.
6. To quickly unwind the cable (10), turn the upper hook of the cable reel (11) so that it points downwards. Then press the mains cable into the cable mount (2) so that you are better able to handle the device while cleaning the floor and do not stumble over the cable.
7. Now insert the plug into a suitable, easily accessible plug socket (120 V, 60 Hz). The red control lamp (18) lights up as soon as the operating voltage is present.
8. To clean carpets, attach the carpet glider (7) with the flat side towards the floor and place the cleaning foot into the carpet glider.
PLEASE NOTE! Only use the carpet glider on carpets and not on hard floors in order to prevent damage to the floor!

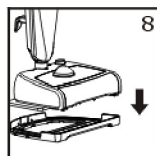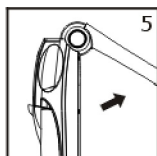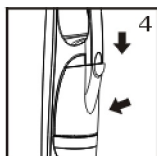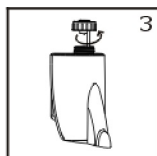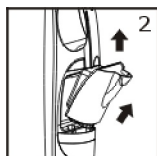

B. Cleaning the floor



CAUTION:

- Keep children and animals away from the device during use.
- Make sure during use that dirt particles do not accumulate beneath the cleaning foot as they could damage sensitive surfaces.
- Never operate the device with the steam function if the water tank is empty.
- During cleaning, make sure the floor cloth is firmly attached to the cleaning foot to prevent damage to the device or flooring.
- Always first test the cleaning with steam on a small spot.

- Never clean the same spot for longer than 10 seconds.
- Never direct the steam at people, animals, or items containing electrical components (e.g. inside ovens, fridges, at switches and lights, microwave ovens etc.).
- Never touch the bottom of the device during operation!
- While the device is in operation, the cleaning foot must not be held at a slanted angle or be inverted as hot spray water may emerge!
- After use the floor cloth may still be very hot. If you wish to remove it, wait about 5 minutes for it to cool down.

NOTE: Water residues in the filter or tank are due to this device having been tested. When you first use the device or if you have not used it for a lengthy period of time, you must hold the steam release button down for approx. 30 seconds after connecting it to the mains to get the device ready for operation. During this time, you will hear a pumping noise because the corresponding parts of the device need to fill up with water.

1. To ensure that the device can be put down easily, the joint in the cleaning foot (14) latches in when the central piece is in the vertical position. To use the device, grab hold of the top handle and tilt the handle to a position which is comfortable for you, and if necessary place your foot on the cleaning foot as you do so.
2. Using your foot, press the On/Off switch (13) on the cleaning foot to switch on the device.
3. Slide the cleaning foot forwards over the surface which is to be cleaned. The loose dirt is taken up by the rotating brush and collected in the collecting container (15) of the device.
4. Press the steam release button (1) to expel steam and clean the floor more thoroughly.
5. If there are any more stubborn areas of dirt or you want to kill germs (e.g. in the vicinity of toilets), hold the cleaning foot on one spot for a number of seconds (but not longer than 10 seconds!).
6. If you want to replace or wash the floor cloth, let go of the steam release button, switch off the device and pull the mains plug out of the plug socket. Wait for 5 minutes so that the device can cool down. Now you can change the floor cloth.
7. If steam stops being produced, the water tank is empty. Let go of the steam release button, switch off the device and pull the mains plug out of the plug socket. refill the tank in the manner described in the "Preparing the device/filling water tank" section.
8. Once the cleaning procedure is complete and the device has completely cooled down, please empty the water tank (see below).

After use



PLEASE NOTE!

- Remove the plug from the mains socket before cleaning the device.
- Do not immerse the device in water and do not rinse it off under running water.
- Allow the device to cool down completely before storing it.
- Store the device in a cool, dry location which is out of the reach of children and animals.

1. Switch off the device, pull out the plug and allow the device to cool down completely (approx. 5 minutes).
2. Remove the water tank from the device and empty it.
3. Carefully pull the collecting container out of the cleaning foot and empty the waste into a rubbish bin. Then place the container back into the device.
4. Remove the floor cloth from the cleaning foot and wash it. You can wash the floor cloths at a maximum of 140°F in the washing machine. Although they can be tumble-dried, you should allow the floor cloths to dry naturally in the air so that they last longer.
5. Over the course of time, hairs, threads and other particles accumulate on the rotatable cleaning brush. We recommend that from time to time you remove any contamination from the brush.
6. As required, wipe down the housing of the device with a soft, dry cloth.
7. Turn the upper hook of the cable reel so that it points upwards and wrap the mains cable around the two hooks of the cable reel.
8. Let all of the parts of the device dry completely before you put it away. For space saving storage, press the unlocking button of the top handle and at the same time tilt it up until it engages audibly.

Technical data

Model: SSS-2618

Device: Dynamo Steam Mop & Sweeper

Voltage supply: 120, 60 Hz

Output: 1500 W

Capacity of the water tank: max. 19.35 oz.

Protection class: 1

Troubleshooting

If the device should stop working properly, first check whether you are able to correct the problem yourself. If you are not, contact the Customer Service (1-888-5SIENNA). Do not try to repair a faulty device yourself!

NOTE: If you use normal tap water in the Dynamo Steam Mop & Sweeper and you have hard water, it may be necessary to replace the filter when it is no longer effective. Mineral deposits can build up in the heating element causing damage and/or diminished performance. Contact Customer Service (1-888-5SIENNA) for information about replacement parts. If replacement of the filter is determined to be necessary, you can purchase this through Customer Service. To remove the filter, first remove the water tank then pull the filter up and out of the steamer body. Replace with a new filter. Using distilled water will extend the life of the unit.

Problem	Possible cause/solution
The device does not work. The red control lamp does not light up.	• Is the plug inserted in the mains socket correctly? • Is the mains socket defective? Try another mains socket. • Check the fuse of your mains connection.
The brush rotates but no steam comes out.	• Have you pressed the steam release button correctly? • The device is not yet ready to operate. Hold the steam release button down for approx. 30 seconds until you no longer hear any pumping noises, and the device begins to emit steam. • The water tank is empty. Fill it up (see "Preparing the device/filling water tank" section).
Water emerges instead of steam.	• The water is forming condensation in the tube. Press the steam release button until steam emerges. If necessary, place a cloth beneath the attachment as water can emerge. If water should unexpectedly continue to emerge instead of steam, let go of the steam release button, pull the plug out of the plug socket, let the device cool down for approx. 5 minutes and then try again.
Only a very small amount of steam emerges.	• The nozzle is blocked. Unscrew the central piece from the cleaning foot and carefully rinse the tube of the cleaning foot with a descaler solution. Use a funnel. Please follow the instructions for using the descaler.

ONE YEAR LIMITED WARRANTY

Warranty: This product warranty extends only to the original purchaser of the product. This product is warranted by the manufacturer to be free from all defects in materials or workmanship for a period of one year from the date of original purchase. This warranty is subject to the following conditions, exclusions and exceptions.

Warranty Exclusions: This warranty does not cover normal wear and tear of parts and does not apply to any product that has been tampered with or used for commercial purposes. This warranty does not cover damage caused by misuse, abuse, negligent handling or damage due to mishandling in transit or shipping. This warranty does not cover damage or defects caused by or resulting from repairs, service or alterations to the product or any of its parts, which have been performed by a repair person not authorized by the manufacturer. This warranty is effective only if the product is purchased and operated in the USA or Canada, and does not extend to any units which have been used in violation of written instructions furnished by the manufacturer, or to units which have had the serial number removed, altered, defaced or rendered illegible.

Warranty Performance: During the limited warranty period, the manufacturer will, at its option, repair or replace free of charge a defective product or part that is covered by this warranty. As a matter of warranty policy, the manufacturer will not refund the purchase price. A repaired or replacement product will be covered by this warranty for the balance of the initial one year warranty period and an additional one month period. To contact Customer Service write to:

Anvid Products, Inc.
Attn: Customer Service
1401-1499 Greenville Road,
Livermore, CA 94550

Or call :1-888-5SIENNA (1-888-574-3662).

Please refer to your product name and model number when contacting Customer Service.

Customer Service will give you further instructions for returning a defective product for repair or replacement. When returning a defective product, carefully pack the item to avoid damage in shipping, the manufacturer cannot assume responsibility for loss or damage during incoming shipment. We recommend that you insure the package, as damage in shipping including the shipping cost is not covered by this warranty. Be sure to include the following items with your product: any accessories related to the problem; your name, complete address and phone number; a note describing the problem you experienced; and a copy of your sales slip or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

Out-of-Warranty Service: A flat rate charge by model is made for Out-of-Warranty service. Please contact our Customer Service for a flat rate. In addition, please include a check of \$20.00 made payable to “ Anvid Products, Inc. ” for return shipping and handling. The check will need to be cleared by the Bank to enable us to return the product.

Limitation of Remedies: No representative or person is authorized to assume for the manufacturer any other liability in connection with the sale of our products. This limited warranty is not transferable and any sale, transfer or other disposition of the product voids this limited warranty. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

REPAIR OR REPLACEMENT SHALL BE THE SOLE REMEDY OF THE PURCHASER UNDER THIS LIMITED WARRANTY, AND IN NO EVENT SHALL THE MANUFACTURER BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSSES OR EXPENSES YOU MAY INCUR IN CONNECTION WITH YOUR PURCHASE OR USE OF THE PRODUCT OR FOR ANY BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you. This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state.